Titan cabinet mounting/dismounting instruction

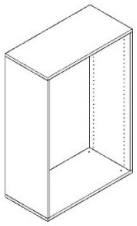

1. **Cabinet carcass :**
   Mounting : wooden dowels and glue at the factory.
   Dismounting : hammer.
   Replacement : whole carcass to be replaced.

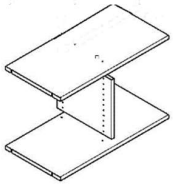

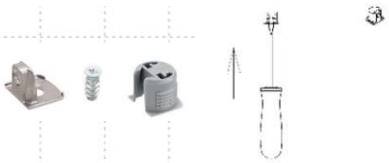

2. **Shelves/partitions :**
   Mounting : Toolex fittings at the factory.
   Dismounting : screw driver.
   Replacement : any needed component to be replaced.

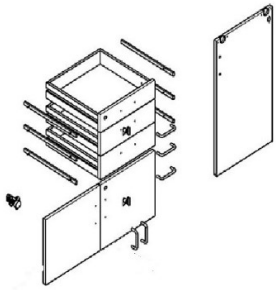

3. **Cabinet fronts/handles/locks :**
   Mounting :
   Fronts and locks are mounted with screws at the factory.
   Handles mounted with screws on customer's site.
   Dismounting : with screw driver.
   Replacement : any needed component to be replaced.

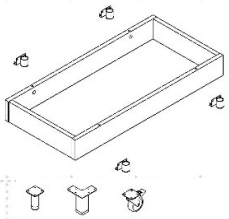

4. **Cabinet socket, legs, leg frame, wheels**
   Mounting :
   Sockets are mounted with wooden dowels and glue at the factory. Excentric fitings are used for mounting the socket to the cabinet carcass. Adjustable legs, leg frame, wheels mounted with screws on customer's site.

   Dismounting:
   Sockets to be removed with screw driver by loosen the excentric fitting
   Adjustable legs/legs/leg frame/wheels to be removed with screw driver.
   Socket dismounted by using hammer.
   Replacement : Socket to be replaced as a whole unit, any other needed component to be replaced.

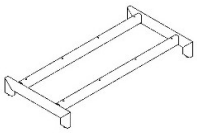

5. **Pull-out cabinet**

   Mounting: Carcass - wooden dowels and glue at the factory, partitions, shelves – toolex fittings at the factory.
   Dismounting: Remove the inner part. Dismount shelves/partitions by loosening the toolex, carcasse by hammer, fittings by screw driver.
   Replacement : carcasses (inner and outer parts) to be replaced as a whole unit, any other needed component to be replaced.

Svenheim
Naujoji str. 132 LT-62175 Alytus, Lithuania
www.svenheim.no
info@svenheim.no