Svenheim

Locker cabinet mounting/dismounting instruction

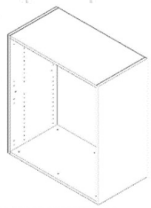

1. **Cabinet carcass :**
   Mounting : wooden dowels and glue at the factory.
   Dismounting : hammer.
   Replacement : whole carcass to be replaced.

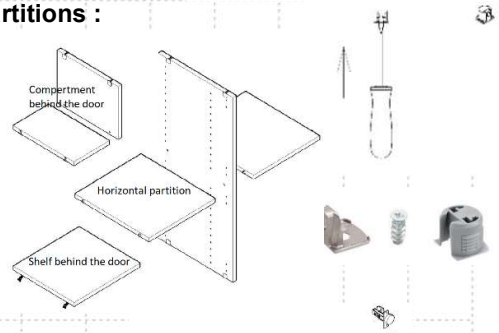

2. **A. Shelves and compartments behind the door/ vertical partitions :**
   Mounting : Toolex fittings at the factory.
   Dismounting : screw driver.
   Replacement : any needed component to be replaced.
   B. Horizontal partitions :
   Mounting : wooden dowels and glue at the factory.
   Dismounting : hammer.
   Replacement : whole carcass to be replaced.

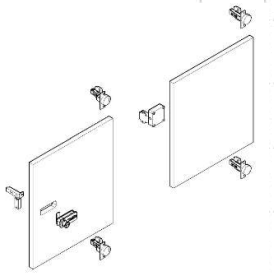

3. **Cabinet fronts/handles/locks :**
   Mounting :
   Fronts and locks (except for dial lock) are mounted with screws at the factory.
   Handles and dial locks mounted with screws on customer's site.
   Dismounting : with screw driver.
   Replacement : any needed component to be replaced.

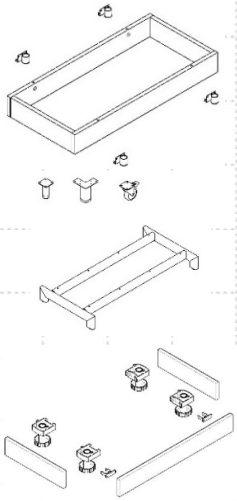

4. **Cabinet socket, legs, leg frame, wheels**
   Mounting :
   Sockets are mounted with wooden dowels and glue at the factory.
   Excentric fitings are used for mounting the socket to the cabinet carcass.
   Adjustable legs, leg frame, wheels, kitchen legs and clip fittings are mounted with screws on customer's site. Plinth's fronts and sides installed are put on by click.

   Dismounting:
   Sockets to be removed with screwdriver by loosen the excentric fitting
   Sockets' fronts and sides from kitchen legs are removed without tools.
   Adjustable legs/legs/leg frame/wheels/kitchen legs/clip fittings are removed with screwdriver.
   Socket dismounted by using hammer.
   Replacement :
   Socket to be replaced as a whole unit, any other needed component to be replaced separately.

Svenheim
Naujoji str. 132 LT-62175 Alytus, Lithuania
www.svenheim.no
info@svenheim.no